


## “ ATTENTION INSTALLER”

## “ATTENTION PURCHASER”

- It is your responsibility to adjust the door and make sure the glass does NOT contact with the hinge panel.
- Make sure there is a safer distance (5 – 7mm) between the glass panels and then adjust to a smaller size until you are satisfied with the gap.
- We have given you the ability to achieve a tight gap to minimize water leaks and to give the screen a frameless look.
- It is your responsibility to comply with the Australian Standards applicable to safety glass and there guidelines.
- You should read the instructions of the glass intended to be used with this hinge system.
- Remember the weakest point of safety glass is the edges and especially the corners.
  - You should place glass on a piece of carpet or 4mm rubber during installation.

### **WE WILL NOT BE RESPONSIBLE IF YOU CHIP THE GLASS OR BREAK IT**

Keep the glass panels 5mm apart and then bring them in to close the gap to suit.

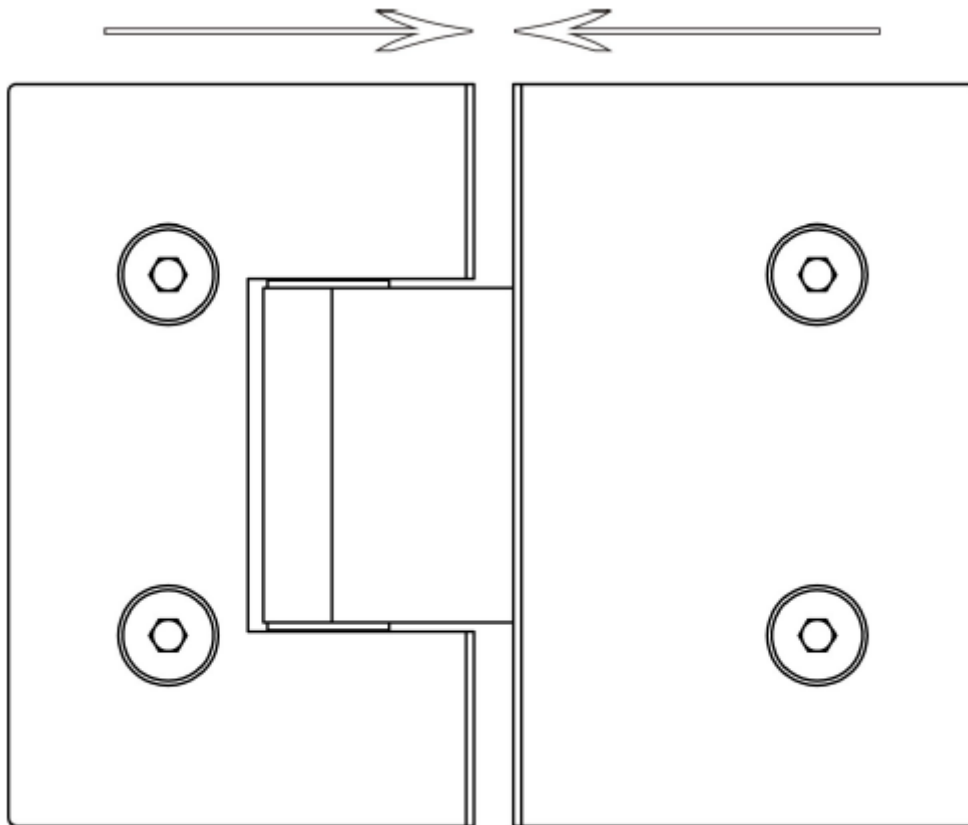

- 1 rubber stuck to each side of the hinge if for 10mm glass
  - 1 rubber on each side of the door and 1 rubber on each side of the hinged panel
- 1 rubber stuck to each side of the hinge and 1 loose rubber either side of the glass is for 8mm glass
  - 3 rubbers in total for 8mm glass
- 1 rubber stuck to each side of the hinge and 2 loose rubbers is for 6mm glass
  - 4 rubbers in total for 8mm glass

**PLEASE REMEMBER IN ORDER TO AVOID CHIPPING THE GLASS, KEEP THE PANELS 5MM APART AND THEN BRING IN CLOSER FOR THE DESIRED GAP.**

## “ INSTALLATION INSTRUCTIONS ”

**Contents: Installation Hardware**

<i>Part Number</i>	<i>Description</i>	<i>Quantity</i>
(i)	Brackets	5
(ii)	Hinges	2
(iii)	Handle	1

