


“ ATTENTION INSTALLER”

“ATTENTION PURCHASER”

- It is your responsibility to adjust the door and make sure the glass does NOT contact with the hinge panel.
- Make sure there is a safer distance (5 – 7mm) between the glass panels and then adjust to a smaller size until you are satisfied with the gap.
- We have given you the ability to achieve a tight gap to minimize water leaks and to give the screen a frameless look.
- It is your responsibility to comply with the Australian Standards applicable to safety glass and there guidelines.
- You should read the instructions of the glass intended to be used with this hinge system.
- Remember the weakest point of safety glass is the edges and especially the corners.
 - You should place glass on a piece of carpet or 4mm rubber during installation.

WE WILL NOT BE RESPONSIBLE IF YOU CHIP THE GLASS OR BREAK IT

Keep the glass panels 5mm apart and then bring them in to close the gap to suit.

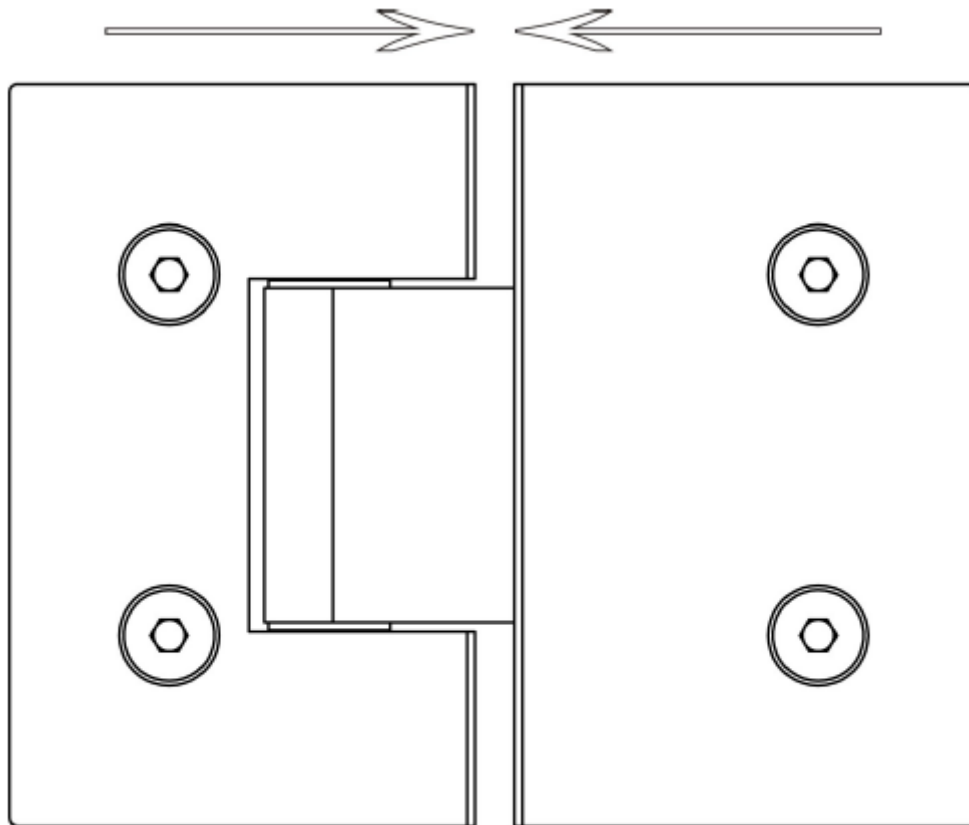

- 1 rubber stuck to each side of the hinge if for 10mm glass
 - 1 rubber on each side of the door and 1 rubber on each side of the hinged panel
- 1 rubber stuck to each side of the hinge and 1 loose rubber either side of the glass is for 8mm glass
 - 3 rubbers in total for 8mm glass
- 1 rubber stuck to each side of the hinge and 2 loose rubbers is for 6mm glass
 - 4 rubbers in total for 8mm glass

PLEASE REMEMBER IN ORDER TO AVOID CHIPPING THE GLASS, KEEP THE PANELS 5MM APART AND THEN BRING IN CLOSER FOR THE DESIRED GAP.

“ INSTALLATION INSTRUCTIONS ”

Contents: Installation Hardware

<i>Part Number</i>	<i>Description</i>	<i>Quantity</i>
(i)	Brackets	5
(ii)	Hinges	2
(iii)	Handle	1

